




INSTALLATION GUIDE FW 1.31

ESX-200, ETX-200, ECX-200

DVB-S/S2, DVB-T and DVB-C Processors

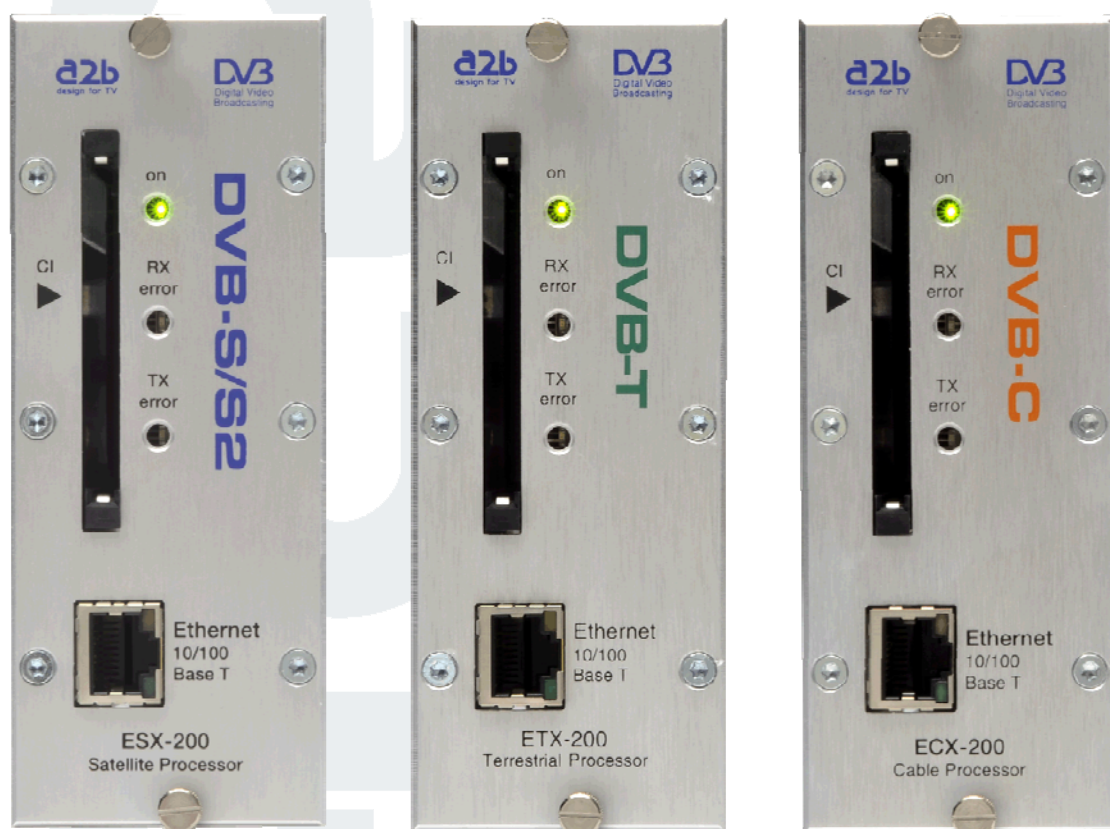

English

design for TV

Content

1. [Introduction](#)
2. [Unpacking the unit](#)
3. [Connections and indications](#)
4. [IP settings](#)
5. [Menus and settings](#)
 - [5.1 Overview menu](#)
 - [5.2 Input settings](#)
 - [5.3 Output settings](#)
 - [5.4 Service management](#)
 - [5.5 System options](#)
6. [About remultiplexing](#)
7. [Installation and Configuration examples](#)
8. [SW options](#)
9. [SNMP](#)
10. [Technical specification EXM](#)
11. [Declaration of conformity](#)
12. [Glossary](#)

1 Introduction

Thank you for purchasing an A2B Electronics product. The EXM products is a revolutionary solutions for reception and modification of satellite, cable or terrestrial transmitted TV-content into various transmission formats for cable-TV and SMATV.


The ESX-200 is for DVB-S/S2 reception, the ETX-200 is for DVB-T reception and the ECX-200 for DVB-C reception.

The EXM unit is delivered with hardware and software that supports DVB-S/S2 or DVB-T or DVB-C reception, MPEG2/MPEG4 H.264 AVC, ASI output, VSB RF modulation with NICAM or A2 audio, SNMP Interface, IP control and management. All hardware needed for upgrade with software options is available from the start. See section **8 SW Options** for more information.

The EXM unit can be upgraded for enhanced functionality and various formats for transmission and processing of digital TV content by sw options. Software options are available from A2B Electronics, please ask us for the specifications and complete price list of all options.

A2B Electronics AB
Phone: +46 (0)141 229115
E-mail: support@a2b.se

Also visit our web site www.a2b.se for more information.

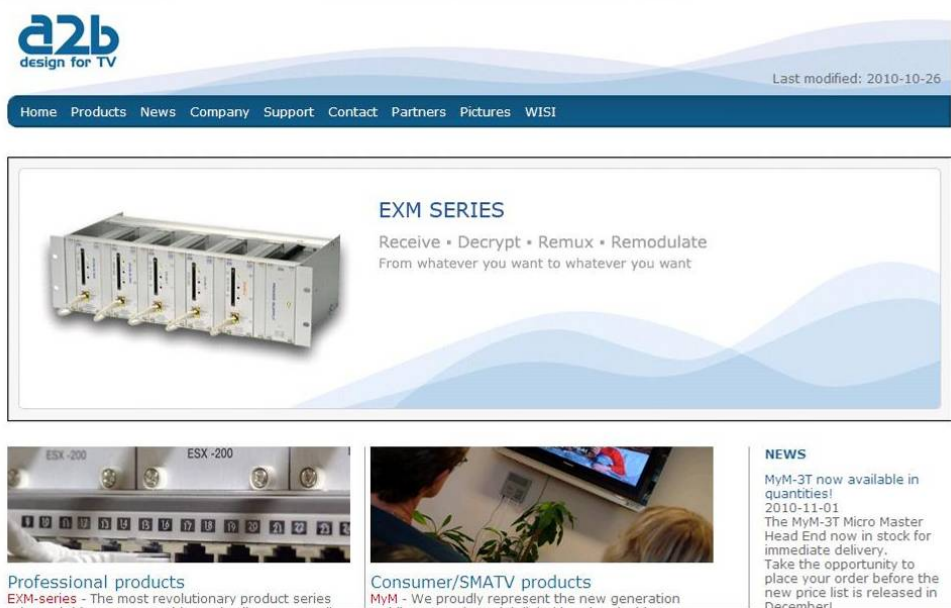

The screenshot shows the A2B Electronics website. At the top is the logo "a2b design for TV" and a navigation bar with links: Home, Products, News, Company, Support, Contact, Partners, Pictures, WIS. Below the navigation bar is a large banner for the "EXM SERIES" with the text "Receive • Decrypt • Remux • Remodulate" and "From whatever you want to whatever you want". To the left of the text is an image of the EXM-200 unit. Below the banner are three smaller sections: "Professional products" with an image of the ESX-200 and text "EXM-series - The most revolutionary product series", "Consumer/SMATV products" with an image of a person watching TV and text "MyM - We proudly represent the new generation", and "NEWS" with text about the MyM-3T Micro Master Head End being in stock for immediate delivery.

2 Unpacking the unit

The following items are included in the package:

<u>Amount</u>	<u>Description</u>
1	ESX-200 or ETX-200 or ECX-200
1	Installation guide
2	Front panel screws

NOTE! *There is no SW CD, nor any Control Software CD. The unit is delivered with all necessary SW embedded including web server for control and settings of the unit.*

Every unit is quality controlled by us before delivery. Should any items be missing when unpacking, please contact our support service (see page 3 for contact info).




Important information about power supply to EXM unit

To avoid problems with the EXM unit and/or EPP-100 it is very important that both

DC plugs on the EXM power cord are fitted into the EPP-100, i.e. each EXM unit needs to be fed from two DC outputs from the EPP-100.


(See picture to the right).

NOTE! *Never connect two EPP units to feed one EXM unit*

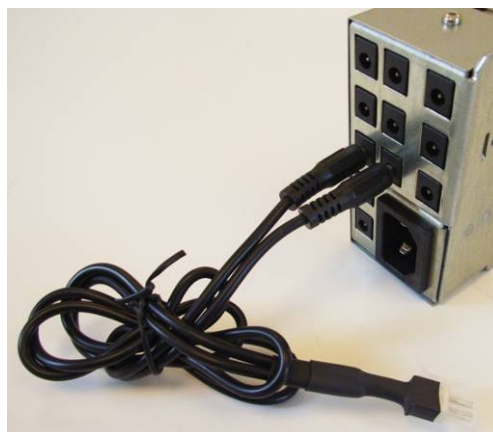


3 Connections and indications

ESX-200

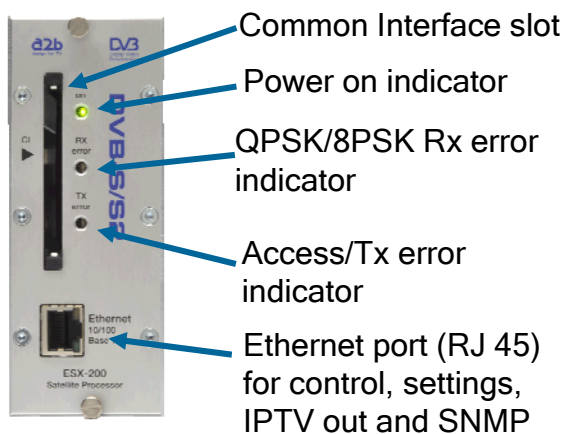

Front panel view of ESX-200

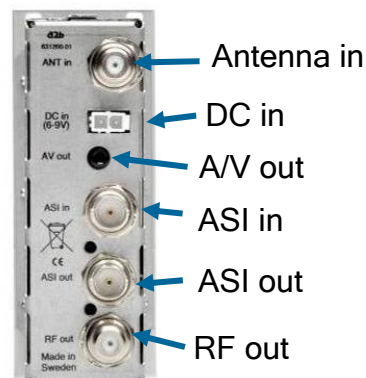

Rear panel view of ESX-200

Common Interface	Insert your Common Interface Conditional Access module into this slot
Power on indicator	Green light indicates that power is on.
Rx error	Red light indicates that the tuner is not locked to the satellite transmission.
Access/Tx error	Red light indicates that the smart card is not authorised or that decryption is not working properly.
Ethernet port	Ethernet for connection to a PC or handheld device with web browser
Antenna in	Connect your outdoor unit (LNB) to this input.
RF out	Connection to Cable TV or SMATV network.

(continued)

3 Connections and indications (continued)


ESX-200 cont.

A/V out *)	Connection for monitoring or to an RF modulator.
ASI in *)	Input for ASI (Asynchronous Serial Interface) for high speed transport stream reception.
ASI out	Output for ASI (Asynchronous Serial Interface) for high speed transport stream transmission.
DC in	Connect a DC voltage to this input (6-10V).


**) Optional function i.e. SW option is needed*

NOTE! We recommend to use only A2B original power supply for correct functionality and life cycle. Warranty will be void in case of damages caused by power supplies not supplied by A2B.

ETX-200

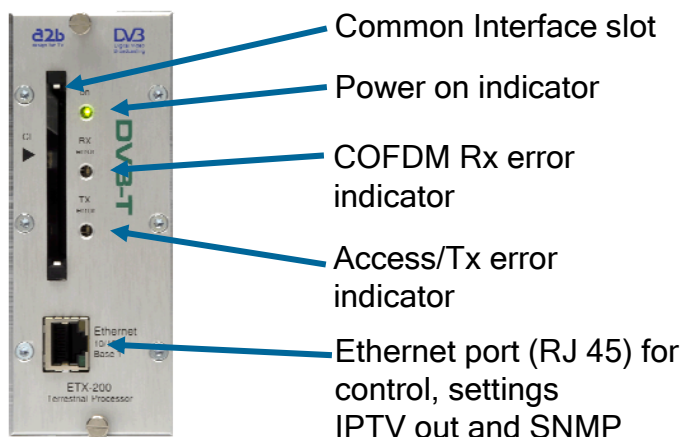

Front panel view of ETX-200

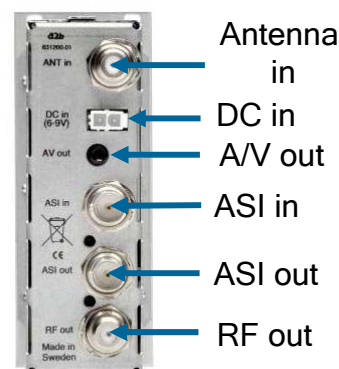

Rear panel view of ETX-200

Common Interface	Insert your Common Interface Conditional Access module into this slot
Power on indicator	Green light indicates that power is on.
Rx error	Red light indicates that the receiver is not locked.
Access/Tx error	Red light indicates that the smart card is not authorised or that decryption is not working properly.
Ethernet port	Ethernet for connection to a PC or handheld device with web browser

3 Connections and indications (continued)


ETX-200 cont.

- Antenna in** Connect your outdoor aerial to this input.
- RF out** Connection to Cable TV or SMATV network
- A/V out *)** Connection for monitoring or to an RF modulator.
- ASI in *)** Input for ASI (Asynchronous Serial Interface) for high speed transport stream reception.
- ASI out** Output for ASI (Asynchronous Serial Interface) for high speed transport stream transmission.
- DC in** Connect a DC voltage to this input (6-10V).


**) Optional function i.e. SW option is needed*

NOTE! We recommend to use only A2B original power supply for correct functionality and life cycle. Warranty will be void in case of damages caused by power supplies not supplied by A2B.

ECX-200

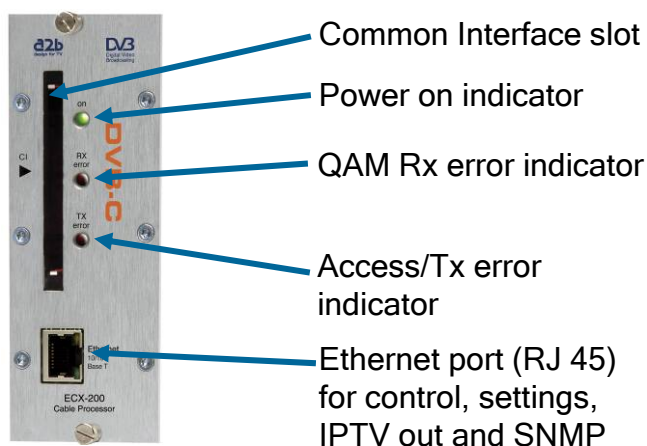

Front panel view of ECX-200

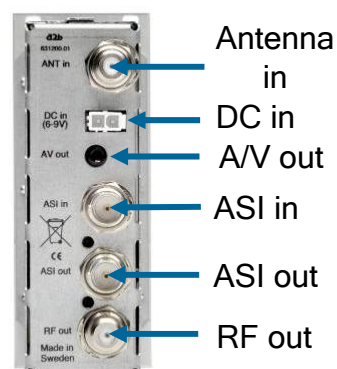

Rear panel view of ECX-200

3 Connections and indications (continued)

ECX-200 cont.

Common Interface	Insert your Common Interface Conditional Access module into this slot
Power on indicator	Green light indicates that power is on.
Rx error	Red light indicates that the receiver is not locked to the QAM transmission.
Access/Tx error	Red light indicates that the smart card is not authorised or that decryption is not working properly
Ethernet port	Ethernet for connection to a PC or handheld device with web browser
Antenna in	Connect your QAM signal to this input.
RF out	Connection to Cable TV or SMATV network
A/V out *)	Connection for monitoring or to an RF modulator.
ASI in *)	Input for ASI (Asynchronous Serial Interface) for high speed transport stream reception.
ASI out	Output for ASI (Asynchronous Serial Interface) for high speed transport stream transmission.
DC in	Connect a DC voltage to this input (6-10V).

**) Optional function i.e. SW Options is needed*

NOTE! We recommend to use only A2B original power supply for correct functionality and life cycle. Warranty will be void in case of damages caused by power supplies not supplied by A2B.

4 IP Settings

EXM units has an embedded web server allowing standard web browsers (Internet Explorer, Firefox, Opera etc.) to connect to the unit for settings and management. No controller software is needed. The EXM unit has by default a static IP address for connecting your PC to the unit.

The EXM unit is delivered with IP address: 192.168.0.20. First time installation requires that you set a static IP address on your computer. For example set your PC to IP address: 192.168.0.19 and Net mask: 255.255.255.0




4 IP Settings (continued)

4.1 TCP/IP settings for Windows XP (setting your PC to 192.168.0.19)

Click "Start", select "Control panel" and select "Network connections" and then select "Network and Internet settings". "Right click" on [Settings for local network] and select [Properties].




In Properties click [Internet protocol (TCP/IP)] and select [Properties].

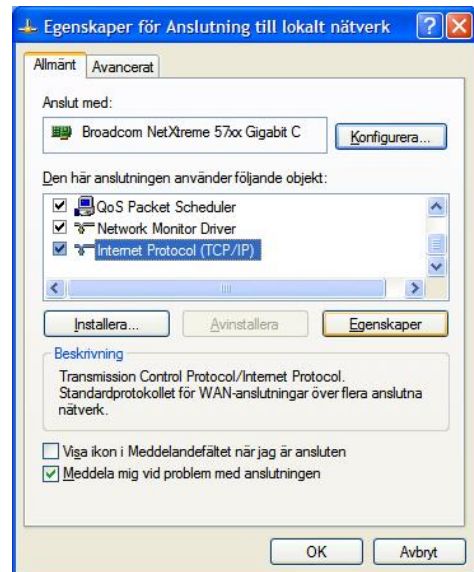

Select [Use this IP adress] and write: 192.168.0.19 and select [Net mask] 255.255.255.0. Click [OK] and then click [Close].

NOTE! For PC with other Operating Systems (OS) than Windows, please consult the Owners manual for your PC for [IP/Network settings].

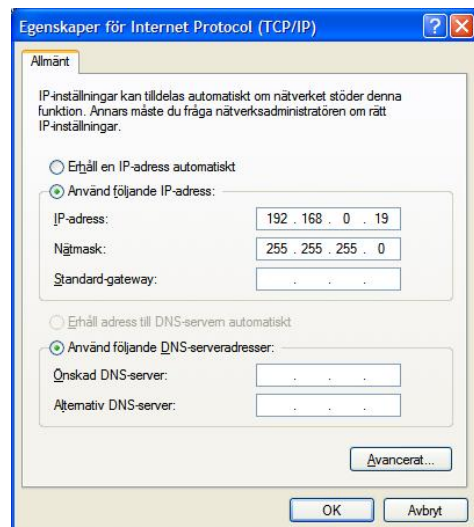

4.2 Connecting your PC to EXM unit

Connect the EXM unit to a DC power supply (EPP-100 or ESP-110). See section 7 for installation.

Next connect your PC to the EXM unit with a network cable.

Start your web browser (Internet Explorer, Firefox, Opera etc.) and write the IP address 192.168.0.20 in the address field in your browser.

4 IP Settings (continued)

4.3. Settings of IP in unit

Click on **[System options]** menu and then click on **[Network]** for settings of IP address, Netmask and Gateway for the EXM unit.

EXM Web Control Interface

a2b
design for TV

Overview Input Output Service Management System Options

Upgrade Date & Time Maintenance Network Users SNMP Uptime

Network

IP address:	172	19	99	42
Netmask:	255	255	0	0
Gateway:	172	19	0	1

Apply settings

Copyright © A2B Electronics AB

5 Menus and settings

All necessary settings can be made in the web GUI via an web browser. When first connection is made with the EXM unit you will see the Overview menu.

5.1.a Overview menu, *Current settings*

Contains information of current input and output signals, if the tuner is locked to a signal, firmware version, bootloader version, hardware revision, serial number, current IP Network settings including the MAC address.

EXM Web Control Interface

a2b
design for TV

Overview Input Output Service Management System Options

Current settings Installation overview Software options Conformance

Current settings

Tuner:	DVB-T
Input:	Tuner
Output:	Analogue
IPTV out:	Disabled
Tuner locked:	Yes
Firmware version:	1.31
Bootloader version:	1.02
Hardware revision:	1104
Serial number:	0350009012800027
License for upgrade valid until:	2011-12-10

Network

MAC Address:	00:22:80:00:0a:4a
IP Address:	172.19.99.42
Netmask:	255.255.255.0
Gateway:	172.19.0.1

Copyright © A2B Electronics AB

5 Menus and settings (continued)

5.1.b Overview menu, *Installation Overview*

In this menu you can see all units that are connected together in a Head End. You can see information of IP address, serial numbers, Firmware version, Input, Output, ASI source, NID, TSID and Uptime. On the left side of the [IP Address] you will have a symbol for all units that's selected as "Output MUX" units. Output MUX units means that those units send, over IP (through the switch), information regarding NIT, SDT and EIT.

Sorting can be done for IP address or for NID (Network ID).

NOTE! All units must be interconnected through a switch to get this Installation Overview to work correct.

EXM Web Control Interface



Overview

Input

Output

Service Management

System Options

Current settings

Installation overview

Software options

Conformance

Installation Overview

	[IP Address]	Serialnumber	Firmware	Input	Output	ASI-Source	[Nid]	TsId	Uptime
 	172.19.91.101	0350010110402003	1.302	DVB-S	QAM	None	41090	101	2d 1h 1m 19s
 	172.19.91.102	0350008101500012	1.302	DVB-S	QAM	None	41090	102	2d 22h 40m 2s
 	172.19.91.103	0350008101500044	1.302	DVB-S	QAM	None	41090	103	2d 22h 39m 57s
 	172.19.91.104	0350008101400024	1.302	DVB-S	QAM	None	41090	104	2d 22h 40m 3s
 	172.19.91.105	0350010110802015	1.302	DVB-S	QAM	None	41090	105	2d 22h 39m 59s
 	172.19.91.111	0350010110802023	1.302	DVB-S	QAM	None	41090	111	2d 22h 39m 58s
 	172.19.91.112	0350008112600018	1.302	DVB-S	QAM	None	41090	112	2d 21h 11m 41s
 	172.19.91.113	0350008090900005	1.302	DVB-S	ASI	None	41090	113	2d 22h 39m 59s
 	172.19.91.114	0350008112700005	1.302	DVB-S	QAM	None	41090	114	2d 22h 39m 56s
 	172.19.91.115	0350008090900002	1.302	DVB-S	QAM	None	41090	95	2d 22h 39m 56s
 	172.19.91.121	0350010030802074	1.302	DVB-T	QAM	None	41090	121	2d 22h 40m 0s
 	172.19.91.122	0350010122800005	1.302	DVB-T	QAM	None	41090	122	1d 8h 16m 12s
 	172.19.91.123	0350009011300003	1.302	DVB-T	QAM	None	41090	123	2d 22h 40m 3s
 	172.19.91.124	0350009011200019	1.302	DVB-T	QAM	None	41090	124	2d 22h 40m 4s
 	172.19.91.125	0350009011300018	1.302	DVB-T	QAM	None	41090	125	2d 22h 40m 0s
 	172.19.91.131	0350010110402001	1.302	DVB-S	QAM	None	41090	131	2d 22h 39m 57s
 	172.19.91.132	0350010110802018	1.302	DVB-S	QAM	None	41090	132	2d 22h 40m 3s
 	172.19.91.133	0350010110802025	1.302	DVB-S	QAM	None	41090	133	1d 12h 47m 2s

Symbol showing that this is an "Output MUX" unit


5 Menus and settings (continued)

5.1.c Overview menu, *Software options*

In this menu you can see what software options there is in the unit.

NOTE! The picture beside shows a unit with sw option EXM-ALL2


EXM Web Control Interface

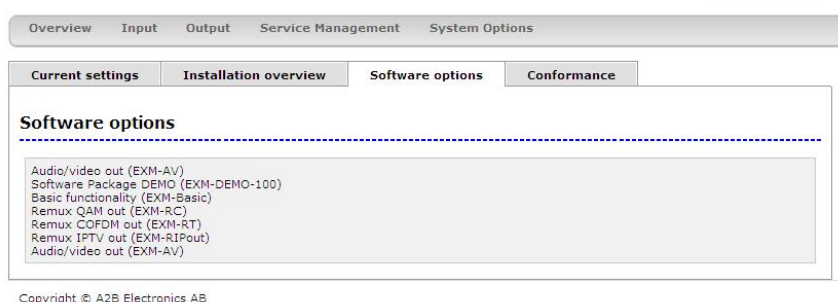

5.1.d Overview menu, *Conformance*

The EXM products are tested and validated to conform to standards and application specifications. In the Conformance menu under Overview, some of these conformances are listed.

EXM Web Control Interface

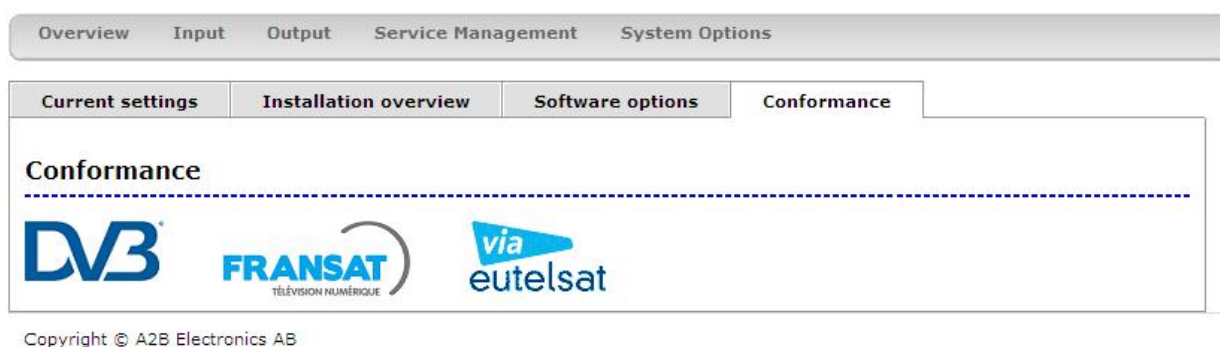

5 Menus and settings (continued)

To continue with settings click on **[Input]** name in the banner.

5.2.a Input settings ESX-200

Select the modulation type you want to receive. If you choose DVB-S2 you also can select between QPSK, 8PSK or 16 QAM. Choose fixed or universal LNB. Set the Polarisation. Voltage, FEC and 22 kHz tone you normally set to “Auto” if you have connected the EXM unit to an Universal LNB or a switch with same functionality as a Universal LNB. You can also select DiSeqC type switch (4 ports) and what port to connect to.

If only “ASI in” is used you can “Disable” the tuner.

Note! Inverted spectrum is sometimes used in C-band transmissions and is set automatically by auto detection.

EXM Web Control Interface



Overview Input Output Service Management Simulcrypt System Options

Input

Input settings

Input source: Tuner

Tuner settings

Locked: Yes
Level: -39.5 dBm
C/N: 15.9 dB

LNB: Universal
Polarisation: Vertical
System: DVBS
Voltage: Auto
FEC: Auto
22 kHz tone: Auto

Symbol rate(kBd): 27500 Set

Transponder frequency (MHz): 12054 Set

DiSeqC type: none

Available services

Tuner:

- XSI_Data
- CORE SI
- TV3 Stockholm
- TV3 Norge
- TV3 Denmark
- Playhouse Disney
- TV1000
- TV1K
- TV1000 Action
- TV1KA
- TV6
- Cartoon/TCM
- Pace 865 Main
- Pace 865 BL
- Samsung BL2
- Samsung Main
- Samsung 7140 Main
- Samsung 7140 BL
- TV1000 Drama
- Samsung 5140 BL
- Samsung 5140 Main

ASI:

- 24Corren
- Animal Planet

Copyright © A2B Electronics AB

5 Menus and settings (continued)

5.2.a Input settings ESX-200, (continued)

Finally enter the correct Symbol rate and click on **[Set]** and then enter the Transponder frequency and click on **[Set]**. The available services are listed to the right.

We suggest that you consult: <http://en.kingofsat.net/> or another web site for correct parameters for the services you intend to use.

The input level should be higher than -65 dBm, preferably more than -50 dBm and max -25 dBm and C/N should read more than 10 dB.

5.2.b Input settings, ETX-200

Select the bandwidth of the channel you want to receive.
Next select the channel number according to CCIR or enter the correct frequency (in MHz). Be sure to press **[Set]** to enter the frequency to the ETX-200.
A list of the available services from the multiplex you tuned to, will be shown on the right hand side.

Below **[Tuner settings]** information of the received signal is displayed.

If only "ASI in" is used you can "Disable" the tuner at **[Input source]**.

We suggest that you consult your local terrestrial operator for correct parameters for each multiplex you want to receive.

Note! We recommend that the [Level] reading is between -31dBm to -55 dBm and C/N better than 25 dB for best performance.

EXM Web Control Interface



Overview Input Output Service Management System Options

Input

Input settings

Input source: Tuner

Tuner settings

Locked: Yes
Level: -29.4 dBm
C/N: 25.0 dB

Bandwidth (MHz): 8

Channel name: E52

Transponder frequency (MHz): 722 **Set**

Available services

Tuner:

- 24Corren
- TCH
- SILVER
- Axxess TV
- Boxer Navigator
- Kanal Global
- TV4 Sport
- BBC World News
- Animal Planet
- Discovery Science
- Disney XD
- Showtime
- TNT7
- Ster1
- C+ Series

ASI:

Copyright © A2B Electronics AB

5 Menus and settings (continued)

5.2.c Input settings, ECX-200

Select [Modulation], [Symbol rate] and the [Channel name] or enter the [Transponder frequency] (in MHz).

Press [Set] to save settings.

A list of the available services from the multiplex you tuned to, will be shown on the right hand side and also available services via the ASI input.

Below [Tuner settings] information of the received signal is displayed.

Note! We recommend that the input level is better than -45dBm and that the C/N is better than 36 dB (QAM64).

EXM Web Control Interface



5.3 Output settings

ASI mode

The output selection ASI disables all RF modulation on the outputs and all selected services will be transmitted only through the ASI output connector. ASI is a high speed interface for digital TV transport streams. Use this output mode if you run IPTV out. Under [Configure bitrate] you can select the output bitrate which is the maximum bitrate for both ASI in ¹⁾ and for ASI out .

NOTE! With Basic functionality the bitrate of ASI output will be the same as the bitrate at the tuner input.

1) Sw option with remux needed to get the ASI input functionality.

EXM Web Control Interface



5 Menus and settings (continued)

5.3 Output settings (continued)

Selection of Output MUX

In the Output menu there is a new “click box” where you click to select a unit as an “Output MUX unit”. This means that by choosing all units with COFDM or QAM as output, those units will exchange all necessary information to build correct tables for NIT, SDT and EIT. In units that are not chosen as Output MUX, this information is not sent out through the connected switch to other units.

NOTE1 All units must be interconnected through a switch to get this [Output MUX selection] to work correct

EXM Web Control Interface



The screenshot shows the EXM Web Control Interface with the following structure:

- Top navigation bar: Overview, Input, Output, Service Management, System Options
- Sub-navigation bar: Output, IPTV output, Configured Bitrate
- Main content area titled "Output" with a dashed blue line separator.
- Inside the "Output" section:
 - Select as Output MUX:**
 - ☐ Output MUX selection (highlighted by an arrow)
 - Note:** Mark this checkbox if this Unit is an Output MUX.
 - Output mode:**
 - ☐ ASI
 - ☒ Analogue
 - ☐ QAM
 - ☐ COFDM
 - Note:** Switching output modes may take a few seconds.

5 Menus and settings (continued)

5.3 Output settings (continued)

Analogue mode

The selection **[Analogue]** is set as factory default as RF output .

Country specific settings can be done by selecting **[Country]**. By selecting a specific country, transmission standard and languages are automatically preset. **[Audio language]** gives you the choosen language if there is more than one language in the received signal.

[Audio level] can be adjusted between +3 to -9 dB.

Subtitling type, subtitle priority and subtitle charset can be selected as well as Subtitle conversion and Subtitle WSS.

Output

Select as Output MUX:
☐ Output MUX selection
Note: Mark this checkbox if this Unit is an Output MUX.

Output mode:
☐ ASI
☒ Analogue
☐ QAM
☐ COFDM
Note: Switching output modes may take a few seconds.

Analogue options
Country: Sweden
[Advanced settings »](#)
Audio language: Swedish
Audio level (dB): -3
A/V Audio level (dB): -3
Video Conversion: Letterbox 16:9
Video WSS: Automatic
Subtitle: ☐ Inactive ☒ Active
Subtitle priority: ☒ DVB ☐ Teletext
Subtitle type: ☒ Normal ☐ Hearing impaired
Subtitle charset: Latin 0
Subtitle language: Swedish
Subtitle conversion: None
Subtitle WSS: Automatic
Radio channel OSD: ☒
Bg color (rgb): 0 0 0
Text color (rgb): 255 255 255
Attenuation (dB): 20 Set
Channel name: E27
Frequency (MHz): 519.25 Set

Copyright © A2B Electronics AB

5 Menus and settings (continued)

5.3 Output settings (continued)

Analogue mode (continued)

If you click on the **[Advanced settings]** text line you can do settings for **[Country]**, **[Video system]**, **[Audio system]**, **[Audio dual mono]** and adjust **[Mono subcarrier level]** and/or **[Stereo subcarrier level]** if necessary.

When **[Audio dual mono]** is selected you have to set Audio language for the correct priority of sound.

In the scroll list for **[Mono subcarrier level]** and for **[Mono subcarrier level]** you can also switch the subcarrier(s) to Off.

Adjustment for **[A/V Audio level]** is also possible to do if the SW option “EXM-AV” is downloaded in the unit.

Output

Select as Output MUX:
☐ Output MUX selection

Note: Mark this checkbox if this Unit is an Output MUX.

Output mode:
☐ ASI
☒ Analogue
☐ QAM
☐ COFDM

Note: Switching output modes may take a few seconds.

Analogue options

Country: Sweden

[Advanced settings >](#)

Video system: SYSTEM B

Video standard: PAL 625

Audio system: NICAM

Audio dual mono: ☐

Mono subcarrier level: -13 dB

Stereo subcarrier level: -20 dB

Analogue options

Country: Sweden

[Advanced settings >](#)

Audio language: Swedish

Audio level (dB): -3

A/V Audio level (dB): 0

Video Conversion: x16:9 (forced)

Video WSS: ic

Bitrate (MBit): Set

Subtitle: ve

5 Menus and settings (continued)

5.3 Output settings (continued)

Analogue mode (continued)

It is possible to select scaling of the picture format to fit with connected TV sets. This is handled in the **[Video conversion]** drop down list where it's possible to choose between the different types. **[Video WSS]** (Wide Screen Signalling) is available in the video for signalling of the aspect ratio to be displayed by the TV sets.

[Configured Bitrate] can be set and this is the bitrate at the ASI output.

NOTE! Refer to the table in page 31 about correct values.

[Radio Channel OSD] gives you the possibility to display the name of a radio channel on connected TV sets. You can choose Bg colour (background colour) and Text colour of the Radio channel name.

[Attenuation] can be chosen from 0 to -31 dB

You can select output **[Channel name]** (E2 to E69) or **[Frequency]** within steps of 1 kHz (e.g. 316,167 MHz) in all three output modes (Analogue, COFDM or QAM). Click **[Set]** to save settings.

The screenshot displays the 'Output' tab of the configuration interface. At the top, there are tabs for 'Overview', 'Input', 'Output', 'Service Management', and 'System Options'. The 'Output' tab is active, and within it, the 'Configured Bitrate' sub-tab is selected. The 'Configured Bitrate' section shows a 'Bitrate (Mbit):' field set to 35, with a 'Set bitrate' button below it. A note states: 'Note: Simultaneously use of IPTV-out together with QAM or COFDM might cause errors in the out'. Below this is the 'Output' section, which includes a 'Select as Output MUX:' checkbox (unchecked), a note to mark the checkbox if the unit is an Output MUX, and an 'Output mode:' section with radio buttons for 'ASI' and 'Analogue' (selected). A note mentions that switching output modes may take a few seconds. The 'Analogue options' section follows, containing various settings: 'Country' (Sweden), 'Audio language' (Swedish), 'Audio level (dB)' (-3), and 'A/V Audio level (dB)' (-3). There is a link for 'Advanced settings >'. The 'Video Conversion' is set to 'Letterbox 16:9', 'Video WSS' to 'Automatic', 'Subtitle' to 'Active', 'Subtitle priority' to 'DVB', 'Subtitle type' to 'Normal', 'Subtitle charset' to 'Latin 0', 'Subtitle language' to 'Swedish', 'Subtitle conversion' to 'None', and 'Subtitle WSS' to 'Automatic'. The 'Radio channel OSD' is checked, with 'Bg color (rgb)' set to (0, 0, 0) and 'Text color (rgb)' set to (255, 255, 255). The 'Attenuation (dB)' is set to 20, with a 'Set' button. Finally, 'Channel name' is set to 'E27' and 'Frequency (MHz)' is set to '519.25', both with 'Set' buttons.

5 Menus and settings (continued)

5.3 Output settings (continued)

QAM mode (SW option)

When selecting **[QAM]** DVB-C output, there are settings for Output channel (E2 to E69) or Frequency, QAM mode (16, 32, 64, 128 or 256QAM), Baud rate (kBaud) and Output signal attenuation (0 to -31dB). Click **[Set]** to save settings.

NOTE! Some of the choices needs optional software to be uploaded before they can be selected.

Output

Select as Output MUX:
☒ Output MUX selection
Note: Mark this checkbox if this Unit is an Output MUX.

Output mode:
☐ ASI
☐ Analogue
☒ QAM
☐ COFDM
Note: Switching output modes may take a few seconds.

QAM options

Baudrate (kBaud): 6875 **Set**
Constellation: 64
Attenuation (dB): 30 **Set**
Channel name: E21
Frequency (MHz): 474 **Set**

COFDM mode (SW option)

For **[COFDM]** output you can select **[Channel name]** (E2 to E69) or **[Frequency]** and **[Attenuation]** from 0 to -31dB. You can also select bandwidth (6,7 or 8 MHz). For max recommended output bitrate see page 31. Click **[Set]** to save settings.

COFDM modulation settings are 2k, 64QAM, FEC 5/6 or 7/8 and GI ¼, 1/8, 1/16 or 1/32

Click **[Service management]** to select service(s) and or create new multiplexes.

Output

Select as Output MUX:
☒ Output MUX selection
Note: Mark this checkbox if this Unit is an Output MUX.

Output mode:
☐ ASI
☐ Analogue
☐ QAM
☒ COFDM
Note: Switching output modes may take a few seconds.

COFDM options

Bandwidth (MHz): 8
FEC: 7/8
Guard Interval: 1/32
Attenuation (dB): 20 **Set**
Channel name: E22
Frequency (MHz): 482 **Set**

5 Menus and settings (continued)

5.4 Service Management

Service selection

The Service selection menu gives an overview of available services from tuner or IP in and/or the ASI input (if enabled). Remultiplexing (remuxing) is possible after downloading an appropriate SW option. To build your own MUX you combine several incoming services. Just click in the dialog boxes for choosing a service as Digital out and/or Analogue out. If a chosen service is encrypted you click in the CI box for decryption. When a choice is made the dialog box change to green colour. In the CI source scroll list you choose if decryption on services coming from tuner or ASI in.

The ASI output automatically contains the services you have selected for [Digital output].

NOTE! To decrypt more than one service requires a sw option that include remux and a multidecryption CA module and a smartcard that is activated for more than one service. Some smartcards can handle three or more services at a time. Please refer to your smartcard service provider and or program provider for further information.

In this menu you can also see the actual (instantaneous) "Payload bitrate" and the "Configured bitrate". This helps you to avoid overload for the output (see page 31 for information).

By a click on the service name or on the Service ID (SID) those can be changed if wanted. In the popup window you write the new name or SID and restore if you want to go back.

EXM Web Control Interface



Selected	Dig	Ana	CI	Name	Type	Provider	Source	SID	LCN	PMT	More
☐	☐	☐	☐	24Corren	Tuner	NT Media AB	Tuner	8050	±	8050	±
☐	☐	☐	☐	TCM	Tuner	Turner Entertainment	Tuner				
☐	☐	☐	☐	SILVER	Tuner	Nonstop Television AB	Tuner				
☐	☐	☐	☐	Axess TV	Tuner	Axess Publishing AB	Tuner				
☐	☐	☐	☐	Boxer Navigator	Tuner	Boxer TV Access AB	Tuner				
☐	☐	☐	☐	Kanal Global	Tuner	DTU Television AB	Tuner				
☐	☐	☐	☐	TV4 Sport	Tuner	TV4 AB	Tuner				
☐	☐	☐	☐	BBC World News	Tuner	BBC Worldwide Ltd	Tuner				
☐	☐	☐	☐	Animal Planet	Tuner	Discovery Communications	Tuner	3220	±	3220	±
☐	☐	☐	☐	Discovery Science	Tuner	Discovery Communications	Tuner				
☐	☐	☐	☐	Disney XD	Tuner	Disney	Tuner				
☐	☐	☐	☐	Showtime	Tuner	Nonstop Television AB	Tuner				
☐	☐	☐	☐	TNT7	Tuner	Nonstop Television AB	Tuner				
☐	☐	☐	☐	SVT1 Östnytt	ASI	Sveriges Television	ASI	5840	±	5840	±
☐	☐	☐	☐	SVT2 Östnytt	ASI	Sveriges Television	ASI	5640	±	5640	±
☐	☐	☐	☐	Kunskapskanalen	ASI	Sveriges Television	ASI				
☐	☐	☐	☐	SVTB/SVT4	ASI	Sveriges Television	ASI				

Copyright © A2B Electronics AB

The red colour of the CI box indicate that CI source is tuner i.e. no decryption can be made on services from ASI in

CI Source : Tuner
Tuner
ASI

172.19.99.45/change_sid.html?source=0&sid_in=111

Enter new SID:

Set SID Restore SID

172.19.99.45/change_name.html?source=0&sid_in=1100

Enter Service Name:

Set new Name Restore Name

5 Menus and settings (continued)

5.4 Service management (cont.)

Service selection, LCN settings

Before starting, ensure that you have selected the correct **[Logical channel type]** in the Network settings submenu. For setting the LCN (Logical Channel Number) you click on the [-] sign under the column named **[LCN]**. Then you will get an popup window where you can write the actual Logical Channel Number (LCN) or/and HD LCN.

NOTE! LCN /HD LCN shall only be set in EXM units with outgoing muxes. LCN is not supported in all DVB receivers i.e. refer to your manufacturer for specification for the DVB receivers in your cable TV network. All EXM units has to be interconnected to a switch to make the LCN /HD LCN to work properly.

Network settings

Click the **[Network settings]** menu to display the Network settings menu. Here you can write **[Network Provider Name]**, **[Network ID]**, **[Original Network ID]**, **[TransportStream ID]** and select **[Logical channel type]**. When one or more choices has been made, you have to click on **[Save settings]** to store your settings. The DVB standard recommends following Network ID ranges:

- DVB-S: 0 to 8191 (0 should be avoided)
- DVB-T: 8193 to 13568 (Boxer in Sweden use 8945)
- DVB-C: 40961 to 65281 (ComHem in Sweden use 41001 and up)

NOTE! To make Network search to work on STB:s (Set Top Boxes) that are connected to the cable TV network you must have all EXM units interconnected to a switch and also assure that the Original network ID and the Network ID is set to the same value in all EXM units with outgoing muxes.

EXM Web Control Interface



Overview Input Output Service Management System Options

Services Networks PID:s Tables Descriptors CI

Service Selection

NetworkProvider Name: Teracom_Mux_5
Payload Bitrate: 4.2 Mbit/s
Configured Bitrate: 35 Mbit/s

CI Input Source: Tuner/IPin

Reset ALL Services

Selected	Dig	Ana	CI	Name	Type	Provider	Source	SID	LCN	PMT	More
☒	☒	☐	☐	24Corren	TV	NT Media AB	Tuner	8050	±	8050	±
☐	☐	☐	☐	TCN	TV	Turner Entertainment	Tuner				
☐	☐	☐	☐	SILVER	TV	Nonstop Television AB	Tuner				
☐	☐	☐	☐	Axess TV	TV	Axess Publishing AB	Tuner				
☐	☐	☐	☐	Boxer Navigator	TV	Boxer TV Access AB	Tuner				
☐	☐	☐	☐	Kanal Global	TV	DTU Television AB	Tuner				
☐	☐	☐	☐	TV4 Sport	TV	TV4 AB	Tuner				
☐	☐	☐	☐	BBC World News	TV	BBC Worldwide Ltd	Tuner				
☒	☒	☒	☒	Animal Planet	TV	Discovery Communications	Tuner	3220	±	3220	±
☐	☐	☐	☐	Discovery Science	TV	Discovery Communications	Tuner				
☐	☐	☐	☐	Disney XD	TV	Disney	Tuner				
☐	☐	☐	☐	Showtime	TV	Nonstop Television AB	Tuner				
☐	☐	☐	☐	TNT7	TV	Nonstop Television AB	Tuner				
☐	☐	☐	☐	Star!	TV	Nonstop Television AB	Tuner				
☐	☐	☐	☐	C+ Series	TV	C More Entertainment AB	Tuner				

Copyright © A2B Electronics AB

http://172.19.99.44/change_lcn.html?source=...

Enter LCN:

Set LCN Remove LCN
Set HD LCN Remove HD LCN

Overview Input Output Service Management System Options

Services Networks PID:s Tables Descriptors CI

Network settings

NetworkProviderName: Teracom_Mux_5

Network ID: 41010

Original Network ID: 41010

TransportStream ID: 42

Logical channel type: Disabled

Save settings

Disabled
Disabled
Nordig
EACEM
Independent Telev

5 Menus and settings (continued)

CI and Smart card information

This menu allows you to view information about your CA-system and current subscriptions etc.

There is also an **[Advanced settings]** menu, but we recommend to NOT change in this menu if you are not aware of what the effect will be.

If you by mistake have changed any setting you can always click on the "Reset button" to come back to Default settings.

NOTE! If changes are made, don't forget to click on "Save"

EXM Web Control Interface



OverviewInputOutputService ManagementSystem Options

ServicesNetworksPID:sTablesDescriptorCI

CI Management

Module

Viaccess ID: 165-008
Neotion Product ID: FE 01 0002 0005
Serial number: 2100621651
Software version: V1.03.R111
Hardware version: V2.0
Boot loader version: r6433
SDK version: sdk r7232
Download ID: 0x1
Module ID: [8801454]
ACS version:
770-3.0.1.12-BROADCAST-10304-BOXER
CAMLock value: Boxer_TV-Access

Press Exit to quit

[Advanced settings](#)

Card insert poll interval (ms):	100
Module reply timeout (ms):	1000
Module poll interval (ms):	100
Min delay between PMT's (ms):	200
Min delay between sends (ms):	200
Use "update" command:	☒
Decrypt video:	☒
Decrypt audio:	☒
Decrypt subtitle/teletext:	☒
Decrypt other:	☐

5 Menus and settings (continued)

5.4 Service management (cont.)

PID management

In this menu you can disable PID's in the outgoing digital transport stream (TS) and you can "Add PID loop through" via tuner or ASI. There are columns showing INpid, OUTpid and Source for each PID.

This is of importance if you want to use an external NIT, EIT, TDT or other PID's.

NOTE! If you do an Add PID loop through it is important that you first Disable the PID if number of outPID's are the same. PID disable is made after CI

EXM Web Control Interface



Overview Input Output Service Management System Options

Services Networks **PID's** Tables Descriptors CI

PID Management

Payload Bitrate: 4.75 Mbit/s
Configured Bitrate: 35.00 Mbit/s

Output source : Remultiplexed

Digital Output

Enable 'All' Disabled Pid(s) Remove 'All' Loophrough Pid(s)

Add PID Loophrough

Inpid : Outpid : Source : Tuner Set

Status	Table	Inpid	Outpid	Source
☒ Disable	PAT	0	0	EXM
☒ Disable	TSDT	2	2	EXM
☒ Disable	NIT-Actual	16	16	EXM
☒ Disable	SDT-Actual	17	17	EXM
☒ Disable	EIT-Actual, EIT-Actual schedule	18	18	EXM
☒ Disable	TDT	20	20	Tuner
☒ Disable	MIP	21	21	Tuner
☒ Disable	EMM	45	45	Tuner
☒ Disable	EMM	61	61	Tuner
☒ Disable	MPEG2-AudioAmd1	488	488	Tuner
☒ Disable	PCR	489	489	Tuner
☒ Disable	PMT	3220	3220	EXM

5 Menus and settings (continued)

5.4 Service management (cont.)

EXM Web Control Interface



Table Management

In this menu you can set static NIT and static SDT if wanted.

This can be helpful if there are changes in the transmissions from the source that is unwanted to affect the NIT table version to avoid to get a message “New channels found, Do you want to do a new channel search?” on digital receivers (STB's or TV's) or if the EXM units are not connected to a switch, static NIT shall be used.

Actual table version of the NIT and SDT can be seen on the left of the scroll lists.

NOTE 1: If you use this function you must manually change the number of the static NIT and/or SDT every time you remove a service, add a service, change LCN or do another change that you want to send the correct table information to the digital receivers.

In the Table Configuration you can see the included tables of NIT and SDT and the repetition rate of the tables and the average output bitrate of those tables.

NOTE 2: The repetition rate can be adjusted but this shall NOT be changed in a normal installation.

The screenshot displays the EXM Web Control Interface. At the top, there is a navigation bar with tabs: Overview, Input, Output, Service Management, and System Options. Below this, a sub-navigation bar highlights 'Services', 'Networks', 'PID:s', 'Tables', 'Descriptors', and 'CI'. The main content area is titled 'Table Management' and is divided into two sections: 'Static version numbers' and 'Table Configuration'.

Static version numbers:

NIT version : [3] Auto [Set]
SDT version : [4] Auto [Set]

Table Configuration:

Table Status	Table name	Rep.rate (ms)	Avg. Output (kbps)	Pid
✓ [Disable]	PAT	100	15.04	0x00
✓ [Disable]	CAT	200	0.00	0x01
✓ [Disable]	PMT	100	30.08	0xFF
✓ [Disable]	NIT	3000	0.50	0x10
✓ [Disable]	SDT	2000	0.75	0x11
⚠ []	SDT-Other	10000	0.00	0x11
⚠ []	BAT	20000	0.00	0x11
✓ [Disable]	EIT Actual,pf	2000	3.01	0x12
✓ [Disable]	EIT Schedule, 0-3	10000	5.11	0x12
✓ [Disable]	EIT Schedule, 4-7	10000	4.66	0x12
✓ [Disable]	EIT Schedule, 8-31	30000	4.51	0x12
⚠ []	EIT Other,pf	5000	0.00	0x12
⚠ []	EIT Other, Schedule	30000	0.00	0x12
⚠ []	TDT	1000	0.00	0x14
⚠ []	TOT	20000	0.00	0x14
⚠ []	RST	20000	0.00	0x13
✓ [Disable]	TSDT	10000	0.00	0x02

5 Menus and settings (continued)

5.4 Service management (cont.)

Descriptor Management

In this menu you can add descriptors.

After an descriptor is chosen you shall click on Add Static Descriptor to get it saved. You can delete one added descriptor by clicking on the “waste basket” symbol or delete or all added descriptors by a click on the “Clear All Static Descr” radio button.

NOTE ! This functionality is ONLY for advanced users.

EXM Web Control Interface



Overview

Input

Output

Service Management

System Options

Services

Networks

PID:s

Tables

Descriptors

CI

Descriptor Management

NOTE: Adding a "faulty" Static Descriptor might corrupt the outgoing transportstream.

Table :

PMT

Descr. Type :

ES-info loop

STid :

8050

ES Pid :

8058

Descriptor(s) shall be added as hexadecimal digits, for example: 12AB0011...

Descriptor :

09

04

01000200

Add Static Descriptor

Clear All Static Descr.

Added Static Descriptors

Table	Descr. loop	TSId	SID	ES-Pid	Tag	Len	Data
PMT	ES-info		8050	8058	09	04	01000200

Copyright © A2B Electronics AB

5 Menus and settings (continued)

5.5 System options

Upgrade

Update of the EXM unit firmware or upload of sw options is done via the **[Upgrade]** menu.

NOTE! Always read the Instructions carefully before starting an upgrade.

Select **[Browse]** and search for the correct file on your computer. When the file is selected press **[Upload]** and the file is uploaded into the EXM unit. When upload is ready you should get a message **“Upload completed”**. Always do a power reset or web reset after finished upload to ensure that the EXM unit reboots with the uploaded software. **[Removal]** gives the possibility to downgrade but it is only recommended for advanced users.

NOTE! Removal of wrong files can cause a non working unit!

Date & Time menu

In this menu, you can chose if the TDT table shall be chosen via tuner in or via ASI in or be disabled. If you have an external unit for correct TDT you can then chose that external unit by choosing ASI as **“Output (TDT) time source”**.

EXM Web Control Interface



File	Version	Build	Removal
UI for EXX-200	EXMRELEASE2	1.31	2.820 [delete]
Audio DSP	EXMRELEASE1	1.001	[delete]
Video DSP	EXMRELEASE1	1.001	[delete]
FPGA (variant: 8)	EXMRELEASE2	1.340	[delete]
FPGA (variant: 7)	EXMRELEASE2	1.340	[delete]
FPGA (variant: 6)	EXMRELEASE2	1.340	[delete]
FPGA (variant: 4)	EXMRELEASE2	1.340	[delete]
FPGA (variant: 4)	EXMRELEASE1	1.330	[delete]
FPGA (variant: 3)	EXMRELEASE2	1.340	[delete]
FPGA (variant: 3)	EXMRELEASE1	1.330	[delete]
FPGA (variant: 2)	EXMRELEASE1	1.340	[delete]
FPGA (variant: 2)	EXMRELEASE1	1.330	[delete]
Firmware for EXX-200	EXMRELEASE2	1.31	3.020 [delete]

Copyright © A2B Electronics AB

EXM Web Control Interface



Select the time source for the outgoing TDT.

Output (TDT) time source: Tuner

The internal EXM time is chosen by the ASI input stream. Input from Tuner has priority over ASI.

Current EXM [UTC] Time : 2010-01-01 12:00:00

Copyright © A2B Electronics AB

5 Menus and settings (continued)

5.5 System options (continued)

Maintenance

This menu allow you to manage configuration of a EXM unit by **[Download]** of the existing configuration in the unit, **[Upload]** of a saved configuration or **[Restore]** the unit to factory settings.

In here you can also do a **[Restart]** of the unit. If the unit has problems that is hard to find the reason for, you can download a **[Diagnostic]** file from the unit and send that file to our support department.
support@a2b.se

EXM Web Control Interface



Network

This menu allow you to manage network settings for an EXM unit. You are able to change the IP address, the Netmask and the Gateway for an unit.

NOTE! If more than one unit is installed you must set different IP addresses to all EXM units if they are connected to a switch.

EXM Web Control Interface



Copyright © A2B Electronics AB

5 Menus and settings (continued)

5.5 System options (continued)

User control (Users)

In the System Options menu there is a new menu where you are able to set Users. When “Enable Usercontrol” is chosen you can set the authority of a user as Read or Read and Write allowance. You click on “Add user” and then make the choice for a user with Read and Write authorities as Admin and for only Read allowance for other users that shall be able to Read from unit(s) but not being able to write i.e. make changes in an unit.

EXM Web Control Interface



Overview Input Output Service Management Simulcrypt System Options

Upgrade Date & Time Maintenance Network Users SNMP Uptime

Users

Enable Usercontrol : ☒

Status	User	Description	Permission
Delete			
Delete			

Add User

Username:

Password:

Description:

Read: ☐

Write: ☐

Save Cancel

Copyright © A2B Electronics AB

If the details for the User control is forgotten, you can disable the User control (login) by using Telnet. After connecting to the unit by Telnet you will get be asked for Username and Password. The Username is: **designfortv** and the password is **123a2b456** After this login, the unit is available through the web ui.

```
172.19.99.65 - PuTTY
Username: designfortv
Password: *****
Welcome to the EXM TELNET Control Interface
>
```

6 About remultiplexing

To be sure that you don't exceed maximum bit rate for an output MUX, please control that you don't select too many services.

If you run a third party SNMP program you can monitor the Output bitrate and see that the outgoing bitrate is not too high.
See Chapter 9 for more information about SNMP.

The table below gives max bit rates for COFDM and QAM out from EXM unit.

NOTE! Due to bit rate fluctuations from statistical multiplexing, we recommend that you use maximum 85% of the theoretical available bit rate

<i>Output signal</i>	<i>Modulation</i>	<i>Baudrate/BW</i>	<i>Theoretical bitrate (Mb/s)</i>	<i>85 %</i>
COFDM	64QAM	8 MHz	31,67	26,92
COFDM	64QAM	7 MHz	31,71	23,55
COFDM	64QAM	6 MHz	23,75	20,19
QAM	16QAM	6.875 Mbaud/s	25,34	21,54
QAM	32QAM	6,875 Mbaud/s	31,68	26,93
QAM	64QAM	6.875 Mbaud/s	38,01	32,31
QAM	128QAM	6.875 Mbaud/s	44,35	37,70
QAM	256QAM	6.875 Mbaud/s	50,69	43,08

Table 1. Theoretical bit rates for COFDM and QAM.

*The formula for calculating QAM output bitrate is: [Baudrate x "A"/(204/188)]
where "A" is 4 for 16QAM, 5 for 32QAM, 6 for 64QAM, 7 for 128QAM and 8 for 256QAM mode.*

7 Installation and Configuration examples

The EXM unit can be installed either as a stand alone unit (Wall mount kit for single EXM unit) or in a base unit (EBU-100).

Before connecting power to the EXM unit, make sure that all other connections have been made. A coaxial cable of good quality with an F-connector should be connected to the Antenna input and another one from the RF output to the cable TV network. Connect a power supply and make all necessary settings as described in section 4 and section 5.

Note! Important information in page 4 about connecting the DC cable.



Installation in a base unit with 5 EXM modules and common power supply.

Accessories



EPP-100 power Supply 100W, 11 outputs
Art no: 103100.02



ESP-110 single power supply 25W, 1 output
Art no: 103200.02



DC-cable for EXM unit
Art no: 500200.01



A/V cable EXM
Art no: 500210.01



ASI cable 250mm
Art no: 500250.01



EBU-100 Base unit for 5 EXM unit modules and power supply EPP-100
Art no: 104100.01



EXM wall mount
Art no: 121000.01



EXM style cover plate 50mm
Art no: 700004.10




EXM style cover plate 20mm
Art no: 700003.10



ASI cable 1000mm
Art no: 501000.01

7 Installation and Configuration examples (cont.)

7.1 Configuration examples: Network settings COFDM out, Mux #1

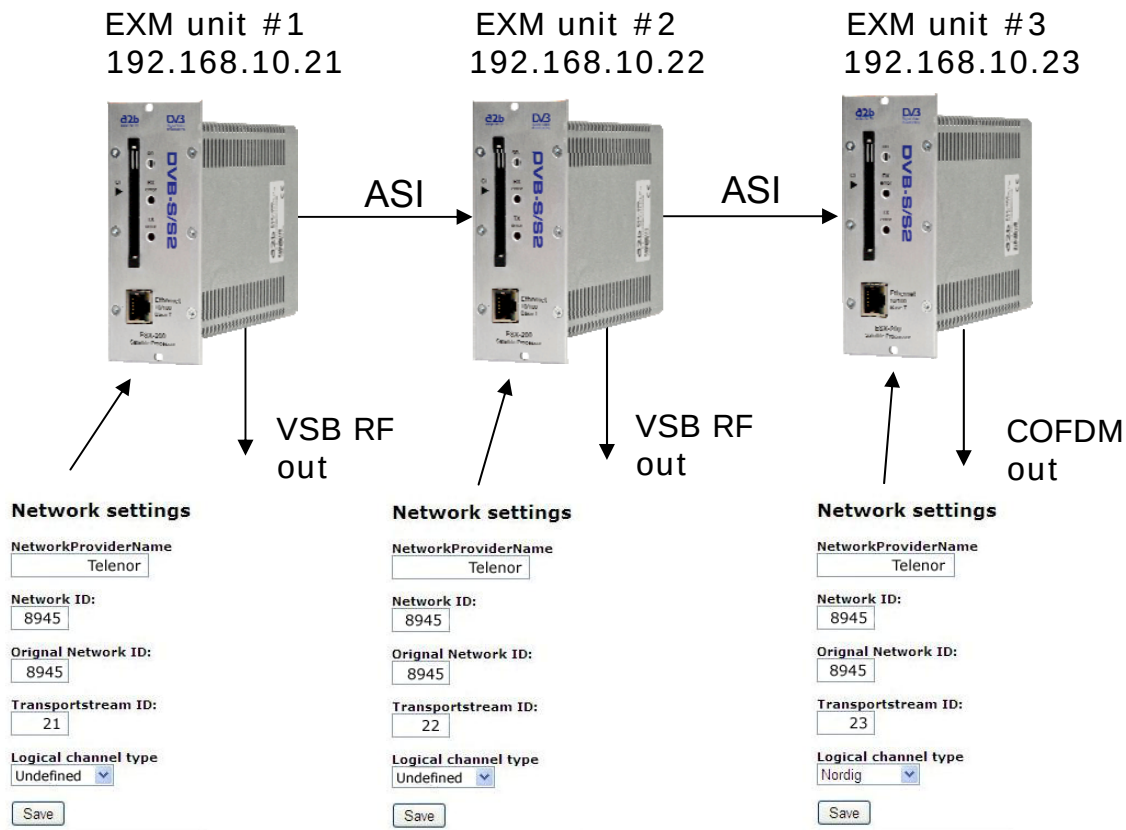

As you can see the **Network ID** and **Original Network ID (ONID)** should be the same in all units and preferable the same ID as the Main terrestrial operator are using (in Sweden Teracom and they use 8945 as ONID). Network ID could have another value than the ONID but most of STB and TV with inbuilt STB will accept same ID for Network ID and ONID.


To avoid problems between two or more Muxes in a Headend it's recommended to use different **Transport Stream ID (TSID)** for each EXM unit in the same Headend. A rule to make the TSID easier to remember is to use same TSID as the last digits in the IP address of the unit. This also makes it easier to remember if a unit shall be replaced.

NetworkProviderName is possible to change. However, if you do not know what STB:s and TV sets customer use it's NOT recommended to change. If the owner of the Headend also provide all STB:s to all households in the Cable TV network this could be changed.

The choice of **Logical channel type** is depending on in which country the installation is made. For the Nordic countries the correct choice is "Nordig". This should be chosen only in the unit with the outgoing MUX i.e. in other units the correct choice is "Undefined". For other countries refer to your DVB specification. Beside Nordig you can choose between EACEM and Independent Television.
(See next page for configuration of Mux #2).

7 Installation and Configuration examples (cont.)

7.1 Configuration examples: Network settings COFDM out, Mux #2

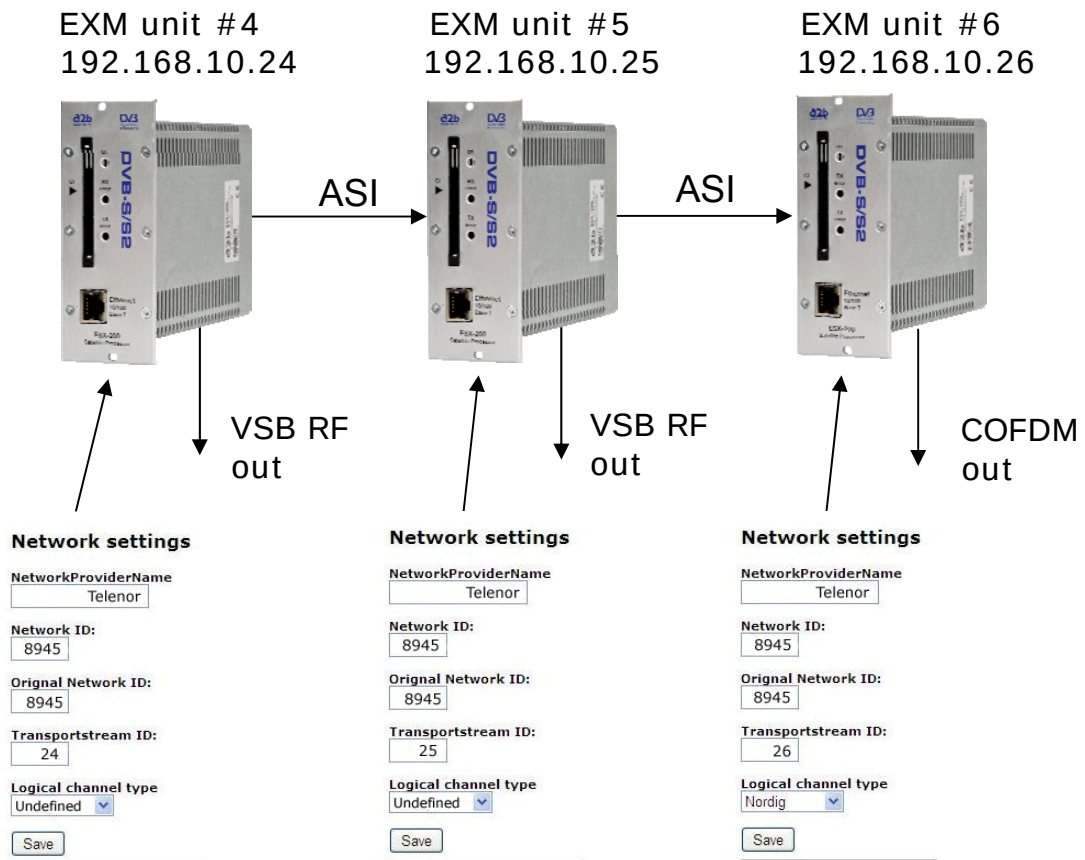


As you can see, the **Network ID** and the **Original Network ID (ONID)** is the same as in the units in MUX #1. The only difference is that all units in this Mux has other **Transportstream ID** than in MUX #1 (here also chosen as the last digits in the IP address).

When building a third Mux you shall use the same settings i.e. **same Network ID and ONID** but different **Transportstream ID**.

NOTE! All three units has SW option EXM-RT.

7 Installation and Configuration examples (cont.)

7.2 Configuration examples: Network settings QAM out, Mux #1

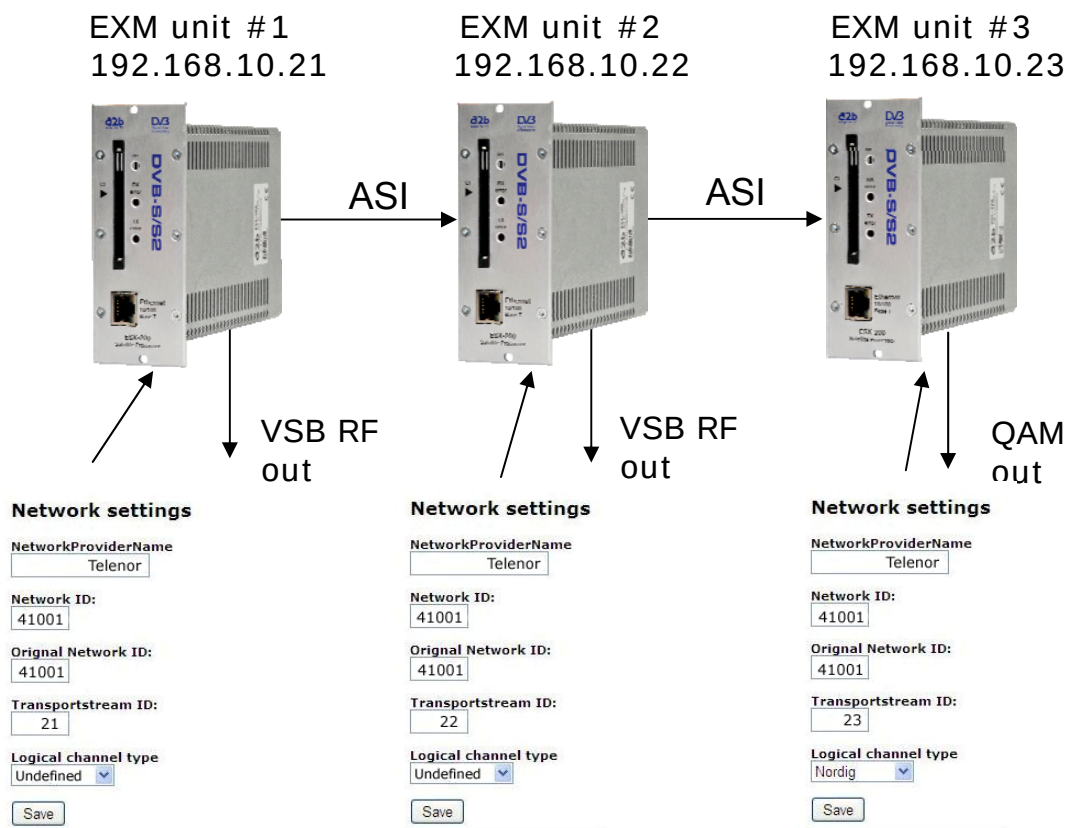

As you can see the **Network ID** and **Original Network ID (ONID)** should be the same in all units and preferable the same ID as the Main Cable operator use (in Sweden ComHem are using 41001 as Network ID). Network ID could have another value than the ONID but most of STB:s and TV:s with inbuilt STB will accept same ID for Network ID and ONID.

To avoid problems between two or more Muxes in a Headend it's recommended to use different **Transport Stream ID (TSID)** for each EXM unit in the same Headend. A rule to make the TSID easier to remember is to use same TSID as the last digits in the IP address of the unit. This also makes it easier to remember if a unit shall be replaced.


NetworkProviderName is possible to change. However, if you do not know what STB:s and TV sets customer use it's NOT recommended to change. If the owner of the Headend also provide all STB:s to all households in the Cable TV network this could be changed.

The choice of **Logical channel type** is depending on in which country the installation is made. For the Nordic countries the correct choice is "Nordig". This should be chosen only in the unit with the outgoing MUX i.e. in other units the correct choice is "Undefined". For other countries refer to your DVB specification. Beside Nordig you can choose between EACEM and Independent Television.

(See next page for configuration of Mux #2)

7 Installation and Configuration examples (cont.)

7.2 Configuration examples: Network settings QAM out, Mux #2

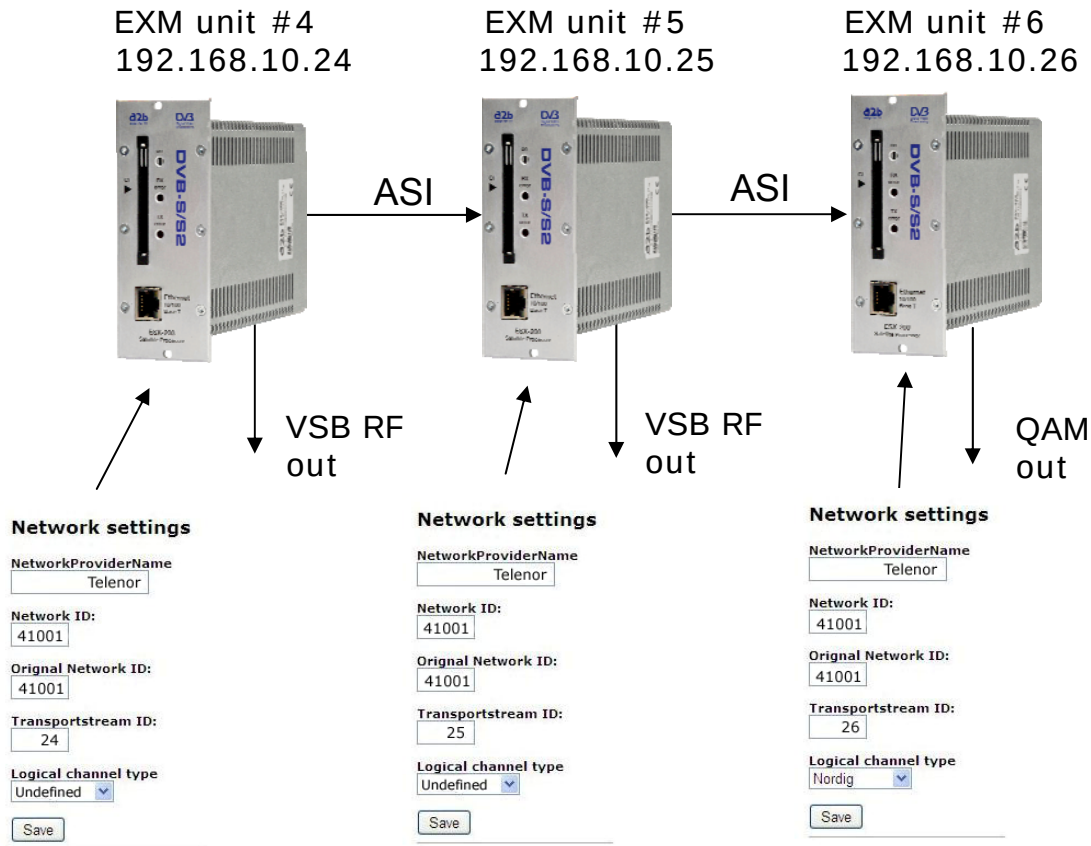

As you can see, the **Network ID** and the **Original Network ID (ONID)** is the same as in the units in MUX #1. The only difference is that all units in this Mux has other **Transportstream ID** than in MUX #1 (here also chosen as the last digits in the IP address).

When building a third Mux you use the same settings i.e. **same Network ID and ONID but different Transportstream ID**.


NOTE! All three units has SW option EXM-RC.

7.3 Installation of EXM unit units through a switch with DHCP with possibility for remote management over VPN connection between office and Head end.



EXM unit connected through a switch with DHCP

VPN connection

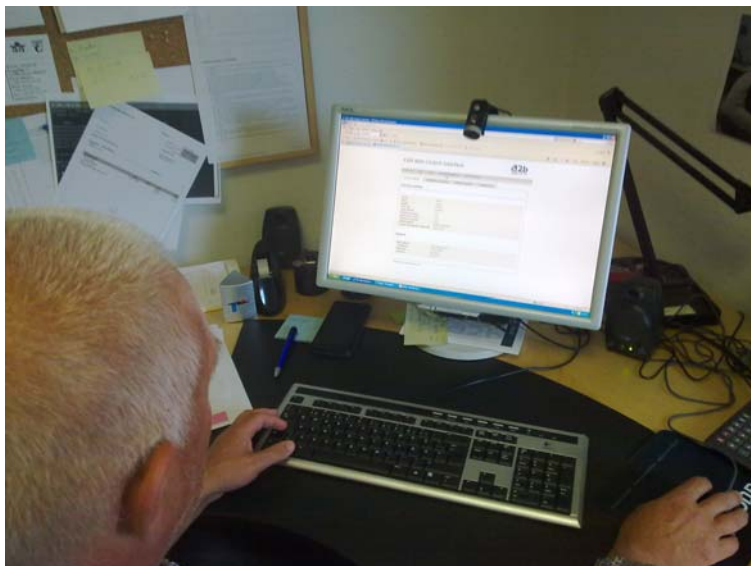

NOTE! If you have questions about how to set up the VPN connection, ask your network administrator for detailed information.

8 SW options

It is possible to upgrade your EXM unit with one or more SW options. Below you can read about available options. For price list, contact your distributor, see www.a2b.se, Partners.

In the System menu you can see what SW options are presently available in your EXM unit.

8.1 EXM-Basic, Basic Functionality

If you have purchased a EXM unit without any SW options you have this basic entitlement which include DVB-S/S2 input and analogue output. ASI output is available. ASI input is disabled.

NOTE! ASI output is without remux i.e. no table changes are made and ASI out bitrate is transparent with tuner in.

8.2 EXM-RC, Remux and QAM out

This SW option allows you to do remuxing and QAM modulation.

8.3 EXM-RT, Remux and COFDM out

This SW option allows you to do remuxing and COFDM modulation.

8.4 EXM-RIPout, Remux and IPTV out

This SW option allows you to do remuxing and IPTV out.

8.5 EXM-AV, Audio/Video out

This SW option allows for A/V out at the back plane A/V connector.

8.6 EXM-ALL, software package.

This SW option includes EXM-RC, EXM-RT, EXM-RIPout and EXM-AV

8.7 EXM-ALL2, software package.

This SW option includes EXM-Ripin, EXM-RC, EXM-RT, EXM-RIPout and EXM-AV

8.8 EXM-Demo, software package

31 days evaluation SW option (includes same options as EXM-ALL).

8.9 EXM-Demo2, software package

31 days evaluation SW option (includes same options as EXM-ALL2).

8 SW options (continued)

8.10 EXM-CL, CryptoLITE

This SW option allows you to encrypt output channels in a mux with Cryptoguard, without any need for an encryption server. For more information please contact Cryptoguard, phone +46-(0)971-10735.

To encrypt a service, click on the tab "Services" and select the service and then click on **[Add Service(s)]**.

For removing the encryption you select the service and then click on **[Remove Service(s)]**

EXM Web Control Interface



Overview Input Output Service Management **CryptoLITE** System Options

Configuration Services

Configuration

SuperCAS
0x4aea0000
Set SuperCAS


CryptoLITE

Copyright © A2B Electronics AB

EXM Web Control Interface



Overview Input Output Service Management **CryptoLITE** System Options

Configuration Services

Added Services

Name	Provider	SID	Source	Stream	Type	Pid
 BFM TV	Eutelsat	415	Tuner		H264	751
					MPEG2	752

Add Service Remove Service

Copyright © A2B Electronics AB

8 SW options (continued)

8.11 EXM-SC, Simulcrypt

This SW option allows you to encrypt a Mux in an EXM unit. When this SW option is uploaded to the unit a new menu will be available (see below).

NOTE! Does not include the encryption equipment such as encryption server, SMS etc.

EXM Web Control Interface



Overview

Input

Output

Service Management

Simulcrypt

System Options

Configuration

Simulcrypt

CA-Server Configuration

ECM addr

ECM-Port

EMM-Port

EMM Datarate

SuperCAS

0 0 0 0

1101

1201

100

0x00000000

[CAT Descr, Private data] shall be added as hexadecimal digits, for example: 12AB0011...

Add server

Available CA-Servers

Channel-Id	ECM addr	ECM-Port	EMM-Port	SuperCAS	State	# emm:s
1	172.19.99.70	1302	1307	0x0b000000	Running	S:0:0

Start Server(s)

Stop Server(s)

Remove Server

ECM-Generator

Access Criteria (Start with 0x... Hexnumber, #... Hexvalue, otherwise Stringvalue)

0x00000000

[PMT CA Descr, Private data] shall be added as hexadecimal digits, for example: 12AB0011...

Add ECM-Generator

Available ECM Generators

Stream-Id	Channel-Id	Access Criteria	# ecms	Status:
1	1	0x00000000	S:10	Req. ECM
2	1	0x00000000	S:9	Req. ECM

Remove ECM Generator(s)

Available Services

Name	Provider	SID	Source	Stream-Id:s	Stream	Type	Pid	[X]
TV3 Stockholm		1100	Tuner	1		MPEG2	1101	☒
						MPEG1	1102	☒
Cartoon/TCM		1170	Tuner	2		MPEG2	1171	☒
						MPEG1	1172	☒
						MPEG1	1173	☒
						MPEG1	1174	☒
						MPEG1	1175	☒
24Corren	NT Media AB	8050	ASI			MPEG2	8059	☐
Animal Planet	Discovery Communications	3220	ASI			H264	3229	☐

Add Service

Remove Service

Download Simulcrypt logfile

Clear logfile

Download logfile

8 SW options (continued)

8.11 EXM-SC, Simulcrypt (cont.)

The setup of encryption of services with Simulcrypt is described below:

1. Make the necessary connection between the EXM unit and the encryption server. For more information about **[Server configuration]**, please refer to your provider of the CA system. As you see it's possible to have different CA server for ECM and for EMM and also possible to add a CAT descriptor, Private data
2. When connected to a CA server and that server is running you click on the line with the "Running server" you want to use. Ensure that line is "marked" dark blue.
3. Chose "Access criteria" and eventually "PMT CA Descriptor" and Click on **[Add ECM Generator]** to create one ECM generator.
4. Repeat step 2 and step 3 above to create more ECM generators. You must create one ECM generator for each service to encrypt.

Available CA-Servers

Channel-Id	ECM addr	ECM-Port	EMM-Port	SuperCAS	State	# emms
1	172.19.99.70	50000	50001	0x0b000000	Running	T:1:1931

ECM-Generator

Access Criteria (Start with 0x... Hexnumber, #... Hexvalue, otherwise Stringvalue)
0x00000000

[PMT CA Descr, Private data] shall be added as hexadecimal digits, for example: 12AB0011...

Available ECM Generators

Stream-Id	Channel-Id	Access Criteria	# ecm:s	Status:
1	1	0x00000000	S:35049	Send ECM
2	1	0x00000000	S:35048	Req. ECM

5. Click on the line with the first ECM generator (1) to mark that ECM generator. Click on the service under **[Add Services]** that you want to encrypt and click on **[Add Service]**
6. To remove encryption on a service you click on the ECM for that service and click **[Remove service]**. By a click in the boxes for video and audio PID's you can deactivate the encryption for example if a free view weekend is actual.

Available ECM Generators

Stream-Id	Channel-Id	Access Criteria	# ecm:s	Status:
1	1	0x00000000	S:0	Wait...
2	1	0x00000000	S:35206	Send ECM

Available Services

Name	Provider	SID	Source	Stream-Id:s	Stream	Type	Pid	[X]
SVT 1 HD		1610	Tuner	2		H264	1611	☒
						AC3	1615	☒
TV1000 HD		1600	Tuner			H264	1601	☐

9 SNMP

With FW from version 1.22 and later in the EXM unit you are able to use the SNMP Interface for monitoring the EXM unit. To enter the SNMP menu on the unit, write: `/snmp.html` after the IP address in the web browser.

Example: `192.168.0.20/snmp.html`

In the **[SNMP agent]** part of the menu you can start the SNMP agent, select Listen port, Read community, Write community.

In the **[SNMP traps]** part of this menu you can select Dest. Address (IP address to the PC that is listening), Dest. port and Community.

EXM Web Control Interface



SNMP agent = the “agent” (SW) that listens for GET or SET

Listen port = port to listen to

Read community = “password” for Management System to be able to access SNMP agents for GET commands. “Public” as default.

Write community = “password” for Management System to be able to access SNMP agents for SET commands (not implemented yet). “Public” as default.

SNMP traps = the “trap” (SW in EXM) that sends information to the Management System when defined instances occur

Dest. address = IP address to host for Management System

Dest. port = port in MS host

Community = “password” for Management System to be able to access SNMP traps. “Public” as default.

NOTE! To be able to use the SNMP you need to use a 3rd party program. One program you can download for trial is <http://www.ireasoning.com/mibbrowser.shtml>. Download the a2b-mibs.zip file that is found in the SNMP menu, unzip and copy the two mib files into the MIB map in the 3rd party program.

10 Technical specification EXM

Connectors and Interfaces

Control and IP out connector	RJ-45, 10/100 BaseT
RF input connector	F female, 75 Ω
RF output connector	F female, 75 Ω
ASI input connector	BNC female, 75 Ω
ASI output connector	BNC female, 75 Ω
CAM connector	PCMCIA (5 VDC)
LED Indicator lights	Power on, Rx error, Tx/Access error
SNMP Interface	RJ-45, 10/100 BaseT
A/V out connector	3,5 mm 4 pole

QPSK/8PSK Satellite Receiver ESX-200

Input Frequency	950 - 2150 MHz
Input Level	-65 to -25 dBm
Input impedance	75 Ω
Spectral inversion	Yes, Auto for C-band LNB
LNB voltage	Auto, Off or 13/18V programmable. Max. 400 mA. (short circuit protected)
22kHz to LNB	Auto, On or Off programmable
DiSEqC 1.1	Yes, 4 port switch
Max input TS bit rate	> 60 Mbit/s DVB-S, DVB-S2
DVB compliance	DVB-S (EN 310 421) DVB-S2 (EN 312 317)

COFDM Terrestrial Receiver ETX-200

Input frequency	50 - 858 MHz (centre freq.)
Input freq step size	250 kHz
Input level range	-60 to -31 dBm *)
Input impedance	75 Ω
Input return loss	12 dB
C/N limit	18 dB *)
Bandwidth	6/7/8 MHz
DVB compliance	DVB-T
Co/adj channel PAL	Compliant to Nordig 2 PAL
Automatic mode change recovery	Yes
Echo performance	Compliant to Nordig 2 unified

*) QEF reception with test signal: 8k, 64QAM, 1/8 guard interval, 2/3 FEC

QAM Cable Receiver ECX-200

Input frequency	50 - 858 MHz (centre freq.)
Input freq step size	250 kHz
Input level range	-55 to -25 dBm *)
Input impedance	75 Ω
Input return loss	12 dB
QAM mode	16, 32, 64, 128 or 256 QAM
Baud rates	3100 to 7000 kS/s
C/N limit	26 dB *)
Bandwidth	8 MHz
DVB compliance	DVB-C

*) QEF reception with test signal: 64QAM, 26 dB C/N

QAM modulation (SW Option)

QAM modes	16, 32, 64, 128 and 256 QAM
Symbol rate	4 - 7.2 Mbaud/s
MER (at RF out)	> 38 dB for 256-QAM
DVB compliance	DVB-C (EN 310 429)
QAM output frequency	47 - 862 MHz (1 kHz step)
Output level	Min 105 dBuV (47-470 MHz) Min 100 dBuV (470-862 MHz)
PSI/SI management	Yes
Remultiplexing	Yes

COFDM modulation (SW Option)

COFDM mode	2K
Guard interval	1/4, 1/8, 1/16 or 1/32
FEC	5/6 or 7/8
MER	>34 dB
DVB compliance	DVB-T (EN 310 744)
Max output bit rate	26,92 Mbit/s (8 MHz bandwidth) 23,55 Mbit/s (7 MHz bandwidth) 20,19 Mbit/s (6 MHz bandwidth)
Output frequency	47 - 862 MHz (1 kHz step)
Output level	Min 100 dBuV (47-470 MHz) Min 95 dBuV (470-862 MHz)
PSI/SI management	Yes
Remultiplexing	Yes

RF Modulation (analogue)

Standards	B/G, I, D/K, L, M/N
Sound	Mono, NICAM stereo or A2/A2* stereo
Modulation video	VSF AM, neg. or pos.
Modulation mono	Audio FM or AM
Output frequency	47 - 862 MHz (1 kHz step)
Output level	$\geq$ 110 dBuV (47-470 MHz) $\geq$ 105 dBuV (470-862 MHz)
S/N weighted	$\geq$ 57 dB
C/N, broadband	$\geq$ 70 dB
NICAM standards	NICAM 728 (EN 310 163)
Power ratio (Vision/NICAM carrier)	B/G -20dB, I -24dB, D/K -24dB, L -31dB
Tolerance	+/- 1dB
Impedance	75 Ω

ASI input (SW option) - output

ASI bit rate	55 Mbit/s
Max payload bitrates:	
Input bit rate	55 Mbit/s *)
Output bit rate	55 Mbit/s *)
PCR restamping	Yes
PSI/SI management	Yes
Remultiplexing	Yes

*) The input, output and throughput bitrate is highly dependent on the type of application that is running in the unit.

MPEG Decoder - Audio

Supported formats	MPEG 1 layer II, AAC HE.
Output	Selection of Dual mono in, Stereo or Mono
Impedance	< 100 Ω
Output level	0 dBu
Level adjustment	+3 to -9dB

MPEG Decoder - Video

Supported formats	MPEG2 MP@ML, MPEG4 H.264 AVC
Output standards	PAL, SECAM or NTSC
Impedance	75 Ω
Output level	1 Vpp @ 75 Ω
Aspect Ratio	Letterbox, Pan/Scan, or conversion Combined (14:9) programmable, WSS
Teletext	Insertion in VBI
Subtitling	Teletext or DVB subtitling
Decryption	Common Interface (PCMCIA 5VDC)
Multidecryption	Yes *)

*) SW option is needed

Remultiplexing (SW option)

Each ESX-200 contains a remultiplexer for 2 incoming transport streams. The transport streams can be received from satellite or IP, and from the ASI input. PID remapping is made automatically or manually by PID management. LCN (Logical Channel Number) can be chosen.

The following components can be remultiplexed: Audio, Video, Subtitling, PAT, PMT, NIT actual, EIT, CAT, SDT, TDT and TOT

IP connection between EXM units in a system is required for NIT, EIT other and SDT other.


Miscellaneous

Power supply	7,5 VDC nom. (6-10 VDC)
Power consumption	Typ. 15 W (excl LNB feed)
Dimensions	165x105x37 mm (excl. connectors)
Weight	Approx. 390 g
Controller	Embedded web server
Operating temperature	-20 to +50°C, non-condensing

This specification may change without prior notice.

Graphical User Interface (GUI)

EXM Web Control Interface

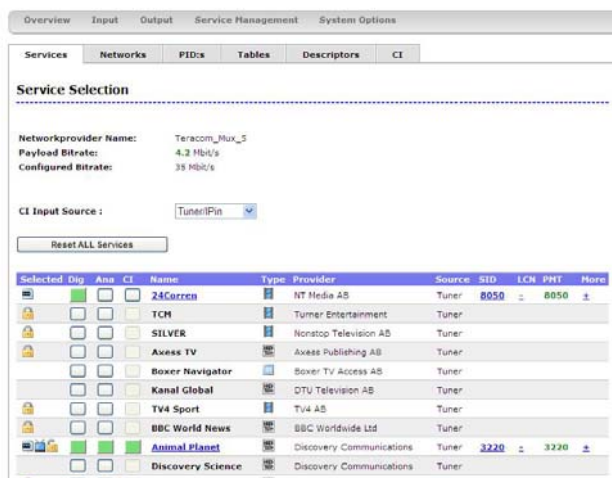

Graphical User Interface for easy set up of complex systems. Simple handling of remultiplexing and creation of new multiplexes from any input.

Disable PID's and create PID loop through makes it more easy to get the PSI/SI content that you want.

Default settings of PSI/SI tables to avoid clashes in the output multiplexes.
Simple menu structure for setting input, output and processing parameters.

Each EXM unit contains an embedded web server. Standard web browsers (Internet Explorer, Mozilla Firefox etc.) are supported

IPTV out (SW Option)

Max output bit rate	55 Mbit/s ²⁾
Connector	RJ 45 (same as control)
Output protocol	UDP, Multicast or Unicast ³⁾
PSI/SI management	Yes
Remultiplexing	Yes

²⁾ Single SPTS/MPTS and only IPTV as output

³⁾ Depending on chosen IP address

Multicast = 239.0.0.1 to 239.255.255.254

Unicast = Other IP addresses

Broadcast = All IP addresses x.x.x.255

SNMP

SNMP agents	Payload bitrate Peak bitrate Uptime Tuner locked Tuner signal level Tuner SNR (C/N) Tuner BER
SNMP traps	Tuner locked/unlocked Cold reboot Warm reboot

11 Declaration of Conformity

The document for Declaration of Conformity you will find at www.a2b.se.



Further information at www.a2b.se.

12 Glossary

DVB	Digital Video Broadcasting (Standardization body)
MPEG-2	Compression format for digital TV
MPEG-4	Compression format for digital TV (SD and HD)
H.264 AVC	Format for compression of the video in HDTV
VSB	Vestigial Side Band (adjacent channel RF modulation)
ASI	Asynchronous Serial Interface (High Speed Interface)
NICAM	Digital sound format for analogue TV transmission
IP	Internet Protocol (defines how data is packetized for Internet broadcast)
IPTV	TV-content packetized for Internet Protocol
DVB-T	Modulation format (COFDM) for terrestrial transmission of digital TV
DVB-C	Modulation format (QAM) for cable transmission of digital TV
DVB-S	Modulation format (QPSK) for satellite transmission of digital TV
DVB-S2	Modulation format (QPSK or 8PSK) for satellite transmission of digital TV
QAM	Modulation standard for digital TV in cable networks
COFDM	Modulation standard for digital TV in terrestrial networks
Remultiplexing	Way of recombining services from different multiplexes
DHCP	Dynamic Host Configuration Protocol is a protocol used by networked devices (<i>clients</i>) to obtain the parameters necessary for operation in an Internet Protocol network. This protocol reduces system administration workload, allowing devices to be added to the network with little or no manual configuration.
Common Interface	Connector for a PCMCIA module used for decrypting encrypted TV programs. Modules should comply with the DVB CI standard
SD	Standard definition TV (576i in Europe)
HD	High Definition TV (720p or 1080i)
LCN	Logical Channel Numbers (method to gives TV programs numbers that define the order the programs appears on a TV or Set Top Box)
VPN	Virtual Private Network (secure point to point connection in an unsecure network)
SMS	Service Management System (system for handling smartcards).
SNMP	Simple Network Management Protocol (SNMP) is used in network management systems to monitor network-attached devices for conditions that warrant administrative attention. SNMP is a component of the Internet Protocol Suite as defined by the Internet Engineering Task Force (IETF). It consists of a set of standards for network management, including an application layer protocol , a database schema , and a set of data objects

Notes

This image shows a blank sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.



A2B Electronics AB

Södra Allén 23-25, 591 37 Motala

P.O. Box 14, 591 21 Motala

SWEDEN

Phone +46 141 229100

Fax +46 141 229101

E-mail market@a2b.se

650200.01 rev J FW1.31

To view our full line of Professional Products, visit our Web site www.a2b.se

www.a2b.se